DIGITAL PRESSURE SWITCHES

Type CFE S/JGInoMIY/J

GENERAL DESCRIPTION

- · All functions can be set by 3 push button switches.
- · Independent ON/OFF setting.
- ON Delay Timer function.
- Pressure calibration

C € mark applicable (available upon request)



TYPE NUMBER SELECTION (SPECIFICATIONS)

Unit: MPa

Catalog No.	Setting/Indication Range		Setting resolution	Calibration range	Airtight Pressure	Wt.
	Min.	Max.	Setting resolution	Calibration range	Altigrit Fressure	(kg)
CFE-SC10B-001	-0.095	0.995	0.005	±0.03	3.85	- 0.3
CFE-SC35B-001	0	3.5	0.02	±0.12		
CFE-SC10B-101	−0.95 bar	9.95 bar	0.05 bar	±0.3 bar	- 38.5 bar	
CFE-SC35B-102	0 bar	35 bar	0.2 bar	±1.2 bar		

COMMON SPECIFICATIONS

Supply voltage: 230V. AC±10% 50/60Hz

Output contact rating: 125/250V. AC 1A($\cos \phi = 1$) SPST


On delay timer: 0 to 240 sec (step=1sec.) Ambient temp. range: -10 to 60°C Storage temperature range: -20 to 70°C

Fluid: Refrigerants (excluding ammonia), water, air.

Pressure connection: 1/4" male flare

Enclosure: IPX2

WIRING



OPERATION


OPERATION PATTERN

During Set Low (LoC)

Output Relay ON

Output Relay OFF

Press. Increase



DELAY TIMER OPERATION PATTERN

During Set Low (LoC)


OUTPUT Relay ON OFF

Press ON OFF

Time


*In case pressure decrease than the ON pressure during working of Delay timer, timer is reset, and dose not turn on.

During Set High (HiC)

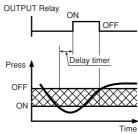

*In case pressure increase than the ON pressure during working of Delay timer, timer is reset, and dose not turn on.

DIMENSIONS

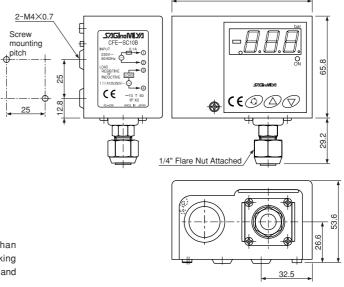

Unit: mm



TORONTO, ON TEL: (905) 737-2113 FAX: (905) 737-7319 MONTREAL, QC TEL: (514) 685-5113 FAX: (514) 685-5119 VERNON, BC TEL: (250) 549-9162 FAX: (250) 549-9182

www.ecotherm.ca 1-866-HV

1-866-HVACMAX (482-2629)